4 First use

1/ Launch the software
A window is opening :

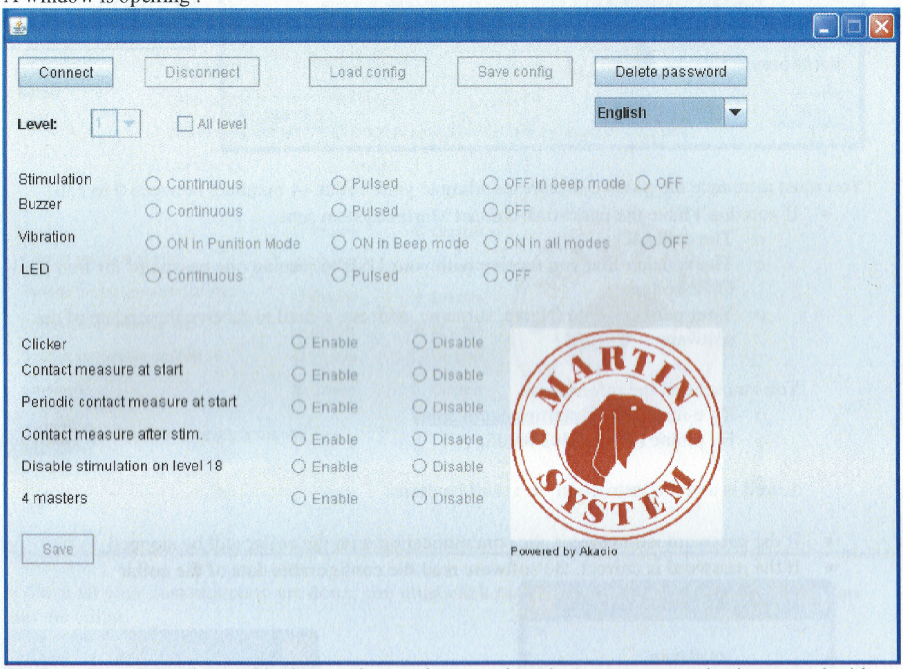

The buttons and the changeable data are in grey because there isn't any communication started with the collar

2/ Put your collar in configuration mode (by let the magnet under the synchronization point of the micro collar waiting for the blinking of the four leds)

3/ Click the button « Connect »
If the below windows is opening, restart the operation from point 2/